


## 4 Ways to increase clearance on the leading driver

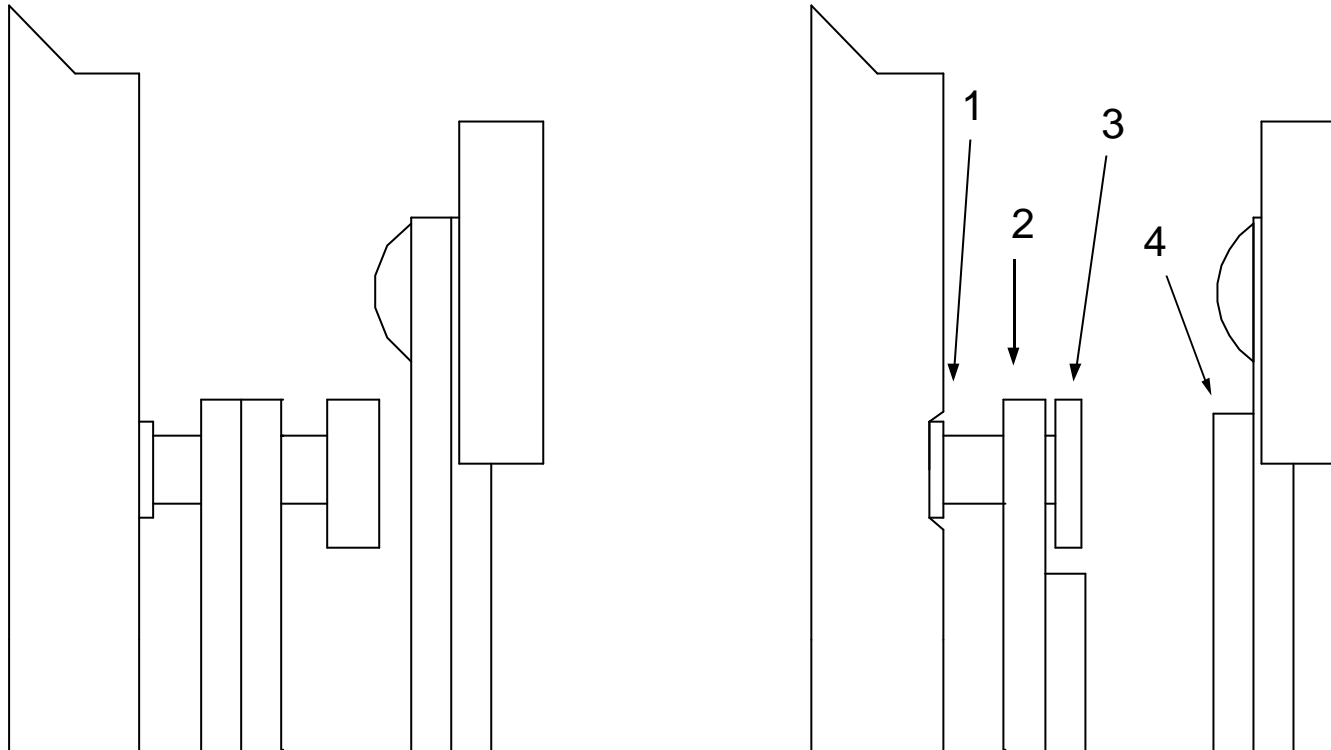

- 1 Recess crankpin boss into face of driving wheel
- 2 Reduce coupling rod to half thickness
- 3 Use thinner washer than usual crankpin washer (e.g. LS80)
- 4 Reduce connecting rod to half thickness